


20. WIRING DIAGRAM

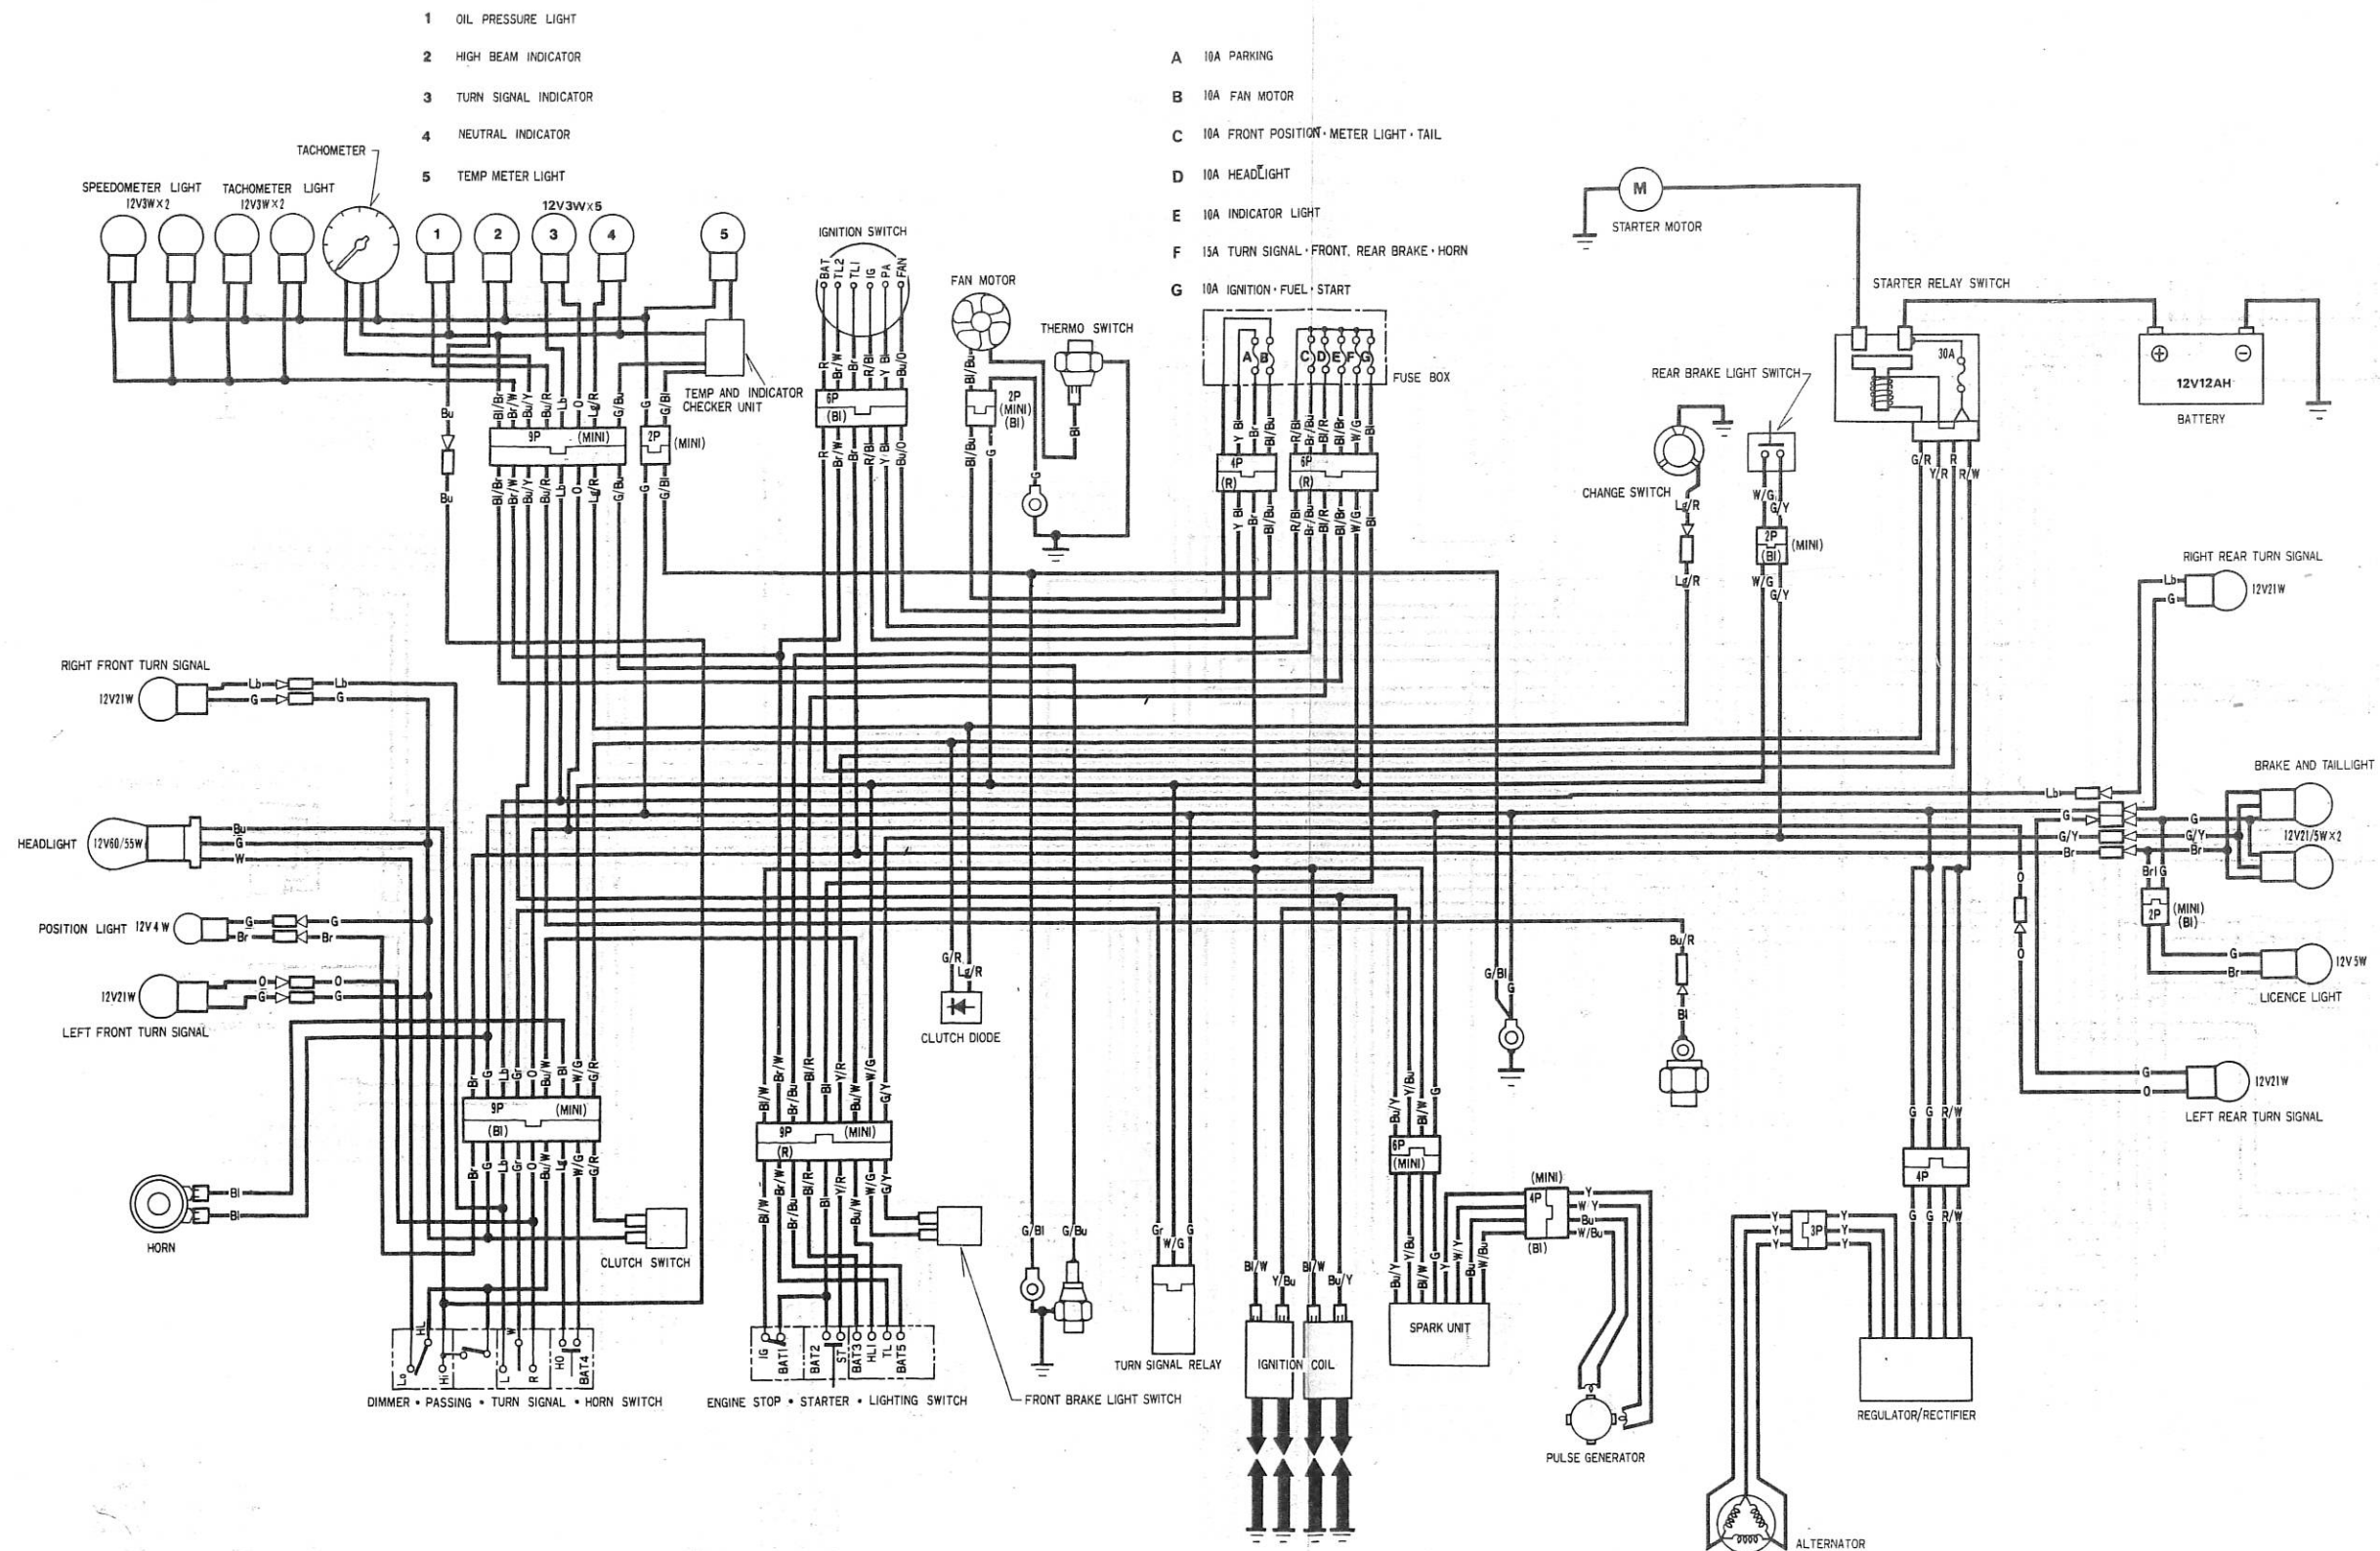

SWITCH CONTINUITY

LIGHTING SWITCH			
	HL1	BAT3	TL BAT5
OFF			
PO			
ON			

STARTER SWITCH	
	BAT2 ST
FREE	
PUSH	

ENGINE STOP SWITCH	
	IG BAT1
OFF	
RUN	
OFF	

TURN SIGNAL SWITCH		
	W	R L
R		
N		
L		

PASSING SWITCH	
	Hi HL2
FREE	
PUSH	

DIMMER SWITCH		
	HL	Lo Hi
Lo		
NI		
Hi		

HORN SWITCH	
	HO BAT4
FREE	
PUSH	

IGNITION SWITCH					
	IG	BAT	FAN	TL1	TL2 PA
OFF					
ON					
P					

BL	BLACK	BR	BROWN
Y	YELLOW	O	ORANGE
BU	BLUE	LB	LIGHT BLUE
G	GREEN	LG	LIGHT GREEN
R	RED	P	PINK
W	WHITE	GR	GRAY

0030Z-MN2-6000